

# **SERVICE MANUAL**

# **DAT SUN 1000**

## **MODEL B10 SERIES**



**NISSAN MOTOR CO., LTD.**

TOKYO, JAPAN

# SERVICE MANUAL



NISSAN MOTOR CO., LTD.  
OTEMACHI BLDG., OTEMACHI, CHIYODA-KU,  
TOKYO, JAPAN


CABLE ADDRESS : "NISMO" TOKYO  
PHONES : (216) 2311

# INTRODUCTION

This manual has been compiled for purpose of assisting DATSUN 1000 distributors and dealers for effective service and maintenance of the Model B10 Series. Each assembly of the major components is described in detail. In addition, comprehensive instructions are given for complete dismantling, assembling and inspection of these assemblies.

It is emphasised that only genuine DATSUN 1000 Spare Parts should be used as replacements.

DATSUN 1000 MODEL B10

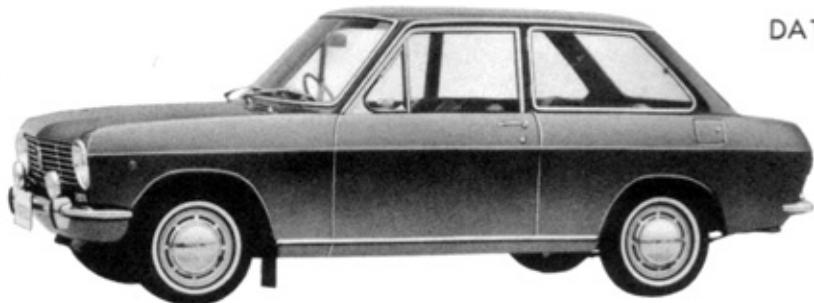

DATSUN 1000 MODEL VB10

# CONTENTS

## CONTENTS


	Page
<b>GENERAL SPECIFICATIONS</b>	I
<b>SERVICE DATA</b>	IX
<b>ENGINE</b>	1
Cooling System	3
Lubrication	9
<b>SERVICE OPERATIONS WITH ENGINE IN POSITION</b>	17
Rocker Mechanism	18
<b>REMOVING &amp; REFITTING</b>	27
Operation with the Engine Removed	28
<b>IGNITION TIMING</b>	47
Distributor	47
Adjusting the Ignition Timing	48
Troubles & Remedies	50
<b>FUEL SYSTEM</b>	53
Carburetor	53
The Gasoline Tank	57
Adjustment and Inspection of Engine	62
<b>CLUTCH</b>	67
<b>TRANSMISSION</b>	73
<b>CHASSIS</b>	95
<b>STEERING</b>	95
Steering Gear Housing	99
<b>FRONT AXLE</b>	103
Dismantling the Front Hub	105
Front Spring	106
Upper Link	108
Lower Link	108
<b>REAR AXLE</b>	109
Inspection & Repairing of Disassembled Parts	115
Assembling Adjustment	116
<b>BRAKE SYSTEM</b>	125
<b>PROPELLER SHAFT</b>	131
<b>REAR SUSPENSION</b>	133

# **DATSON 1000**


---

<b>ELECTRICAL SYSTEM</b>	137
Alternator	140
Generator	140
14 Items on Handling	149
Trouble Shooting List	150
Starter Motor	151
<b>BODY</b>	159

## GENERAL VIEWS OF B10

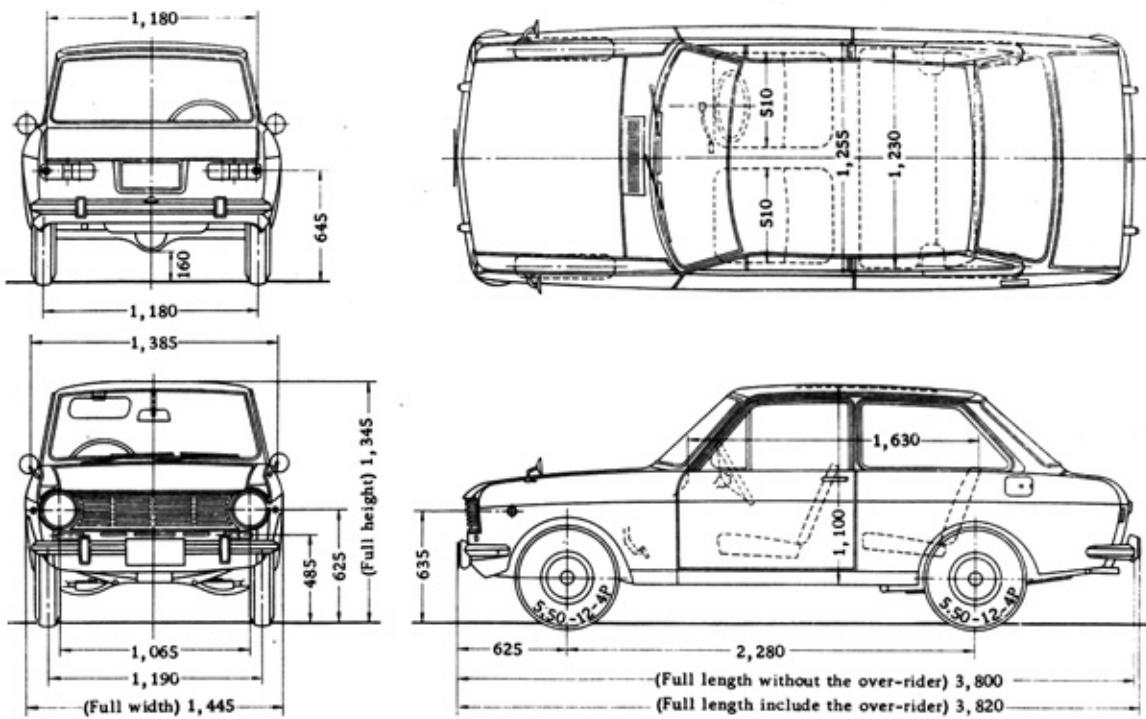

## GENERAL VIEWS OF VB10

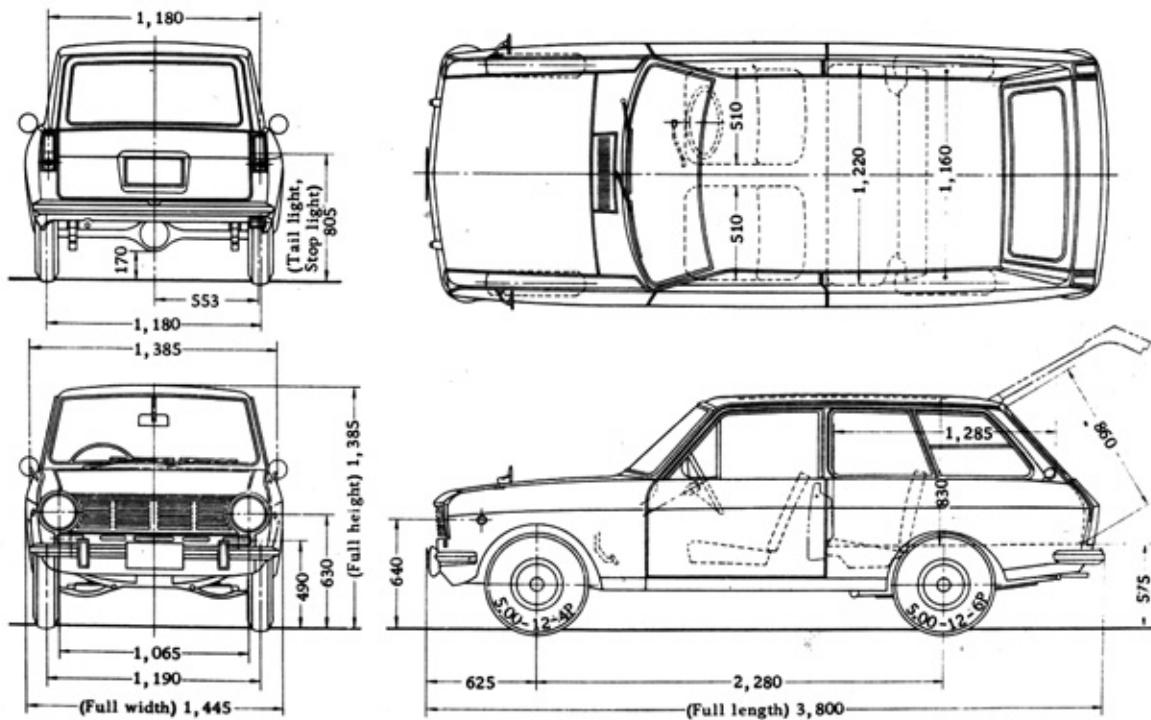

These specifications are subject to change without notice.

# **DATSON 1000**

---

